


Applicable Tools


■ Extraction Tool for D-3000 Series

wiring type tool for pulling the contact from the housing

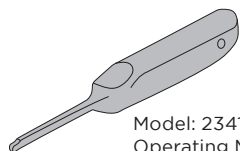


Model: 234168-1
Operating Manual: 411-5726


Using the extractor

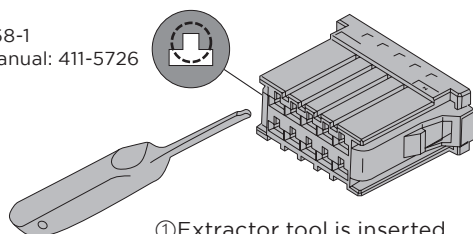

- ① Extractor tool is inserted into the small, upper part of the convex hole in the housing as shown in the diagram (please hold the tool the right way up)

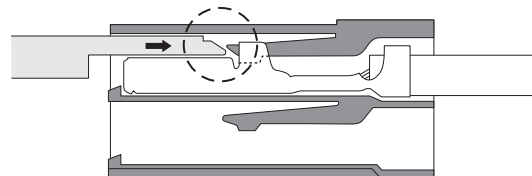

- ② The tip of the tool lifts the housing lance and frees the contact

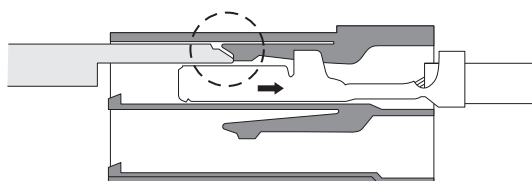

- ③ Contact can be withdrawn

* Take care not to insert into the Contact Section. If you have inserted by error, replace the damaged contact with a new one before proceeding.

■ Extraction Tool for D-5000 Series


A tool for pulling out terminals from cable's crimping plug/socket housing.

(When inserting, please note that the positioning dowels of D-3 and D-5 are opposite up and down.)

Only D-5 terminals can be pulled out with a tool such as a small flathead screwdriver or awl.


Part Number: 409158-1
Operation Manual: 411-5774

Using the Extraction Tool

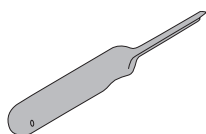


- ① The pulling tool should be inserted into the narrow part of bottom, with convex hole in the housing as shown in the diagram.

If using the D-5 Extraction Tool

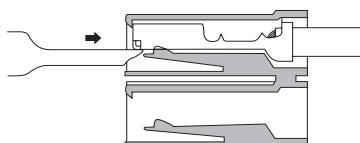


- ② The tip of the tool lifts the housing lance and frees the contact

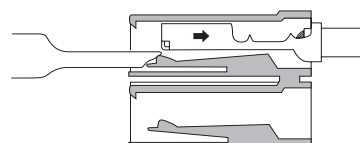


- ③ Contact can be withdraw

If using a small O-driver or awl

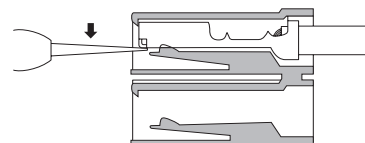

- ② The tip pushes down the lance part and frees the contact

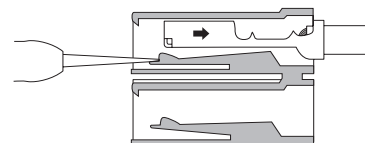

- ③ Contact can be withdraw

■ Unplugging tool D-7000 series

Part Number: 2040080-1
Operation Manual: 408-78147

Please be sure that it is not inserted into the terminal position. If it is inserted incorrectly, replace the terminal with a new one.




■ Crimping Oil


Part Number: 939691-1
For easing the friction between tool and contact during crimping



■ Sequence clip

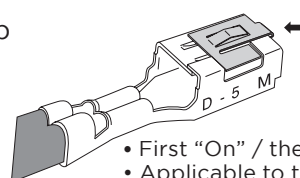

- First "On" / then "Off"
- Applicable to the D-5 terminal only

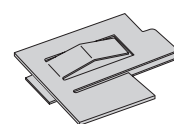

Part Number: 179993-1