 
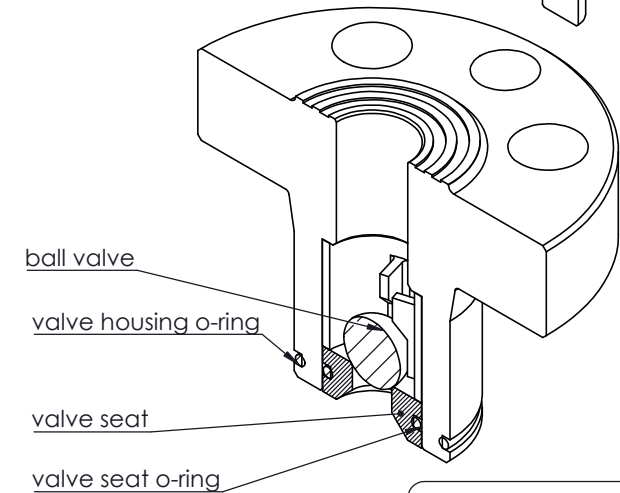 
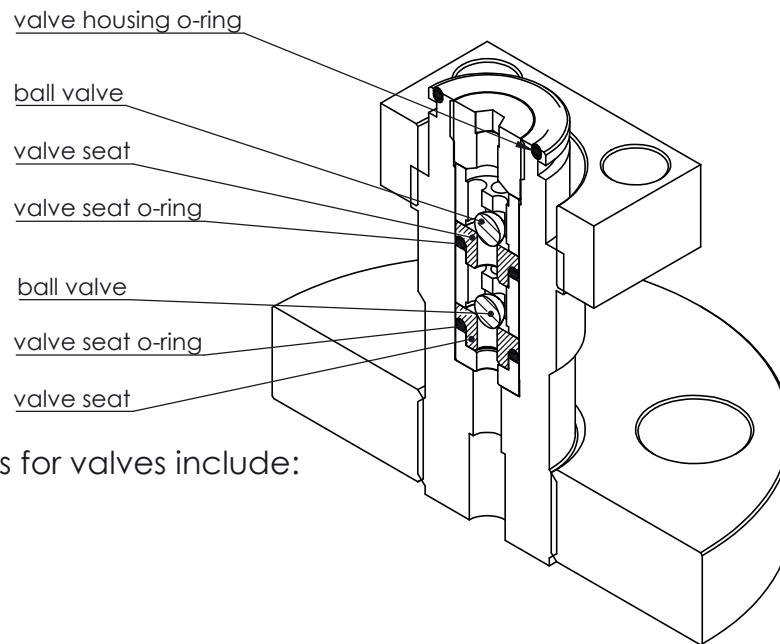 
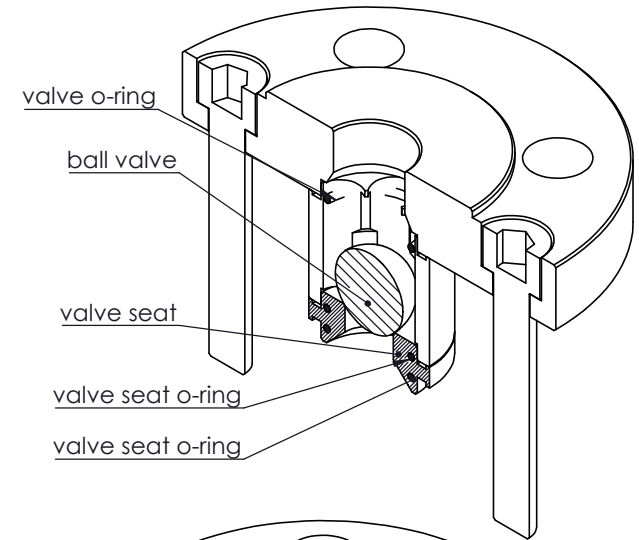 


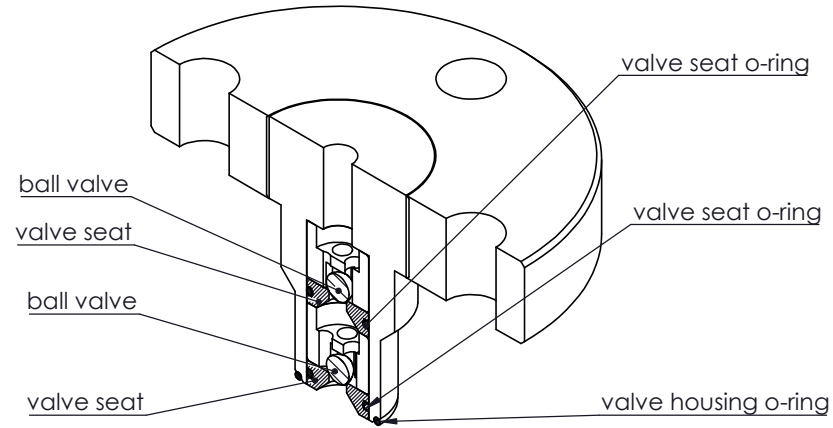

All the spare part kits for valves include:

- valve seat
- valve ball
- gaskets

All the components above are provided for both suction and discharge valves (one pump unit).

Guides, flanges, valve housings and screw NOT included

Spare Part Kit DRW

VALVES

