
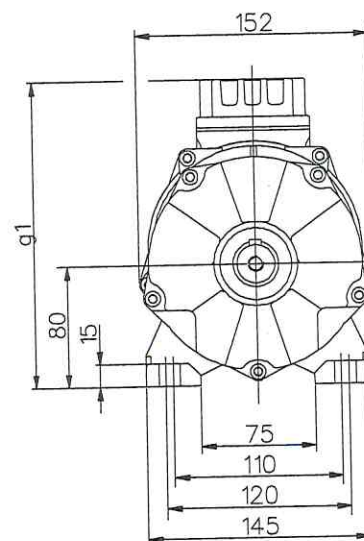
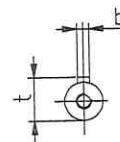



 

A42

Dimensioni / Dimensions / Abmessungen / Encombres / Dimensiones

CH

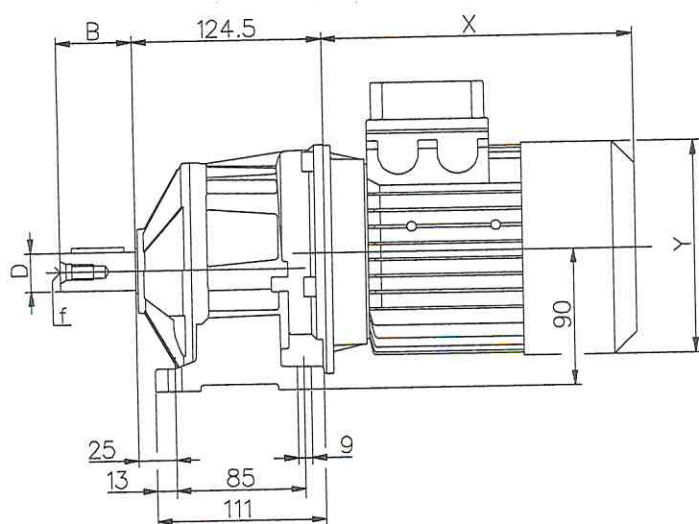

CH

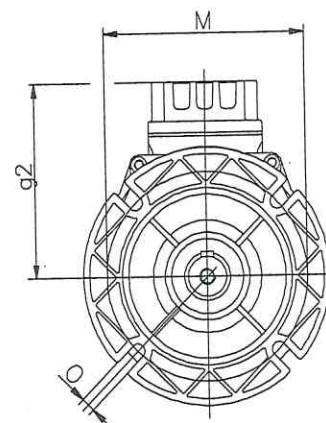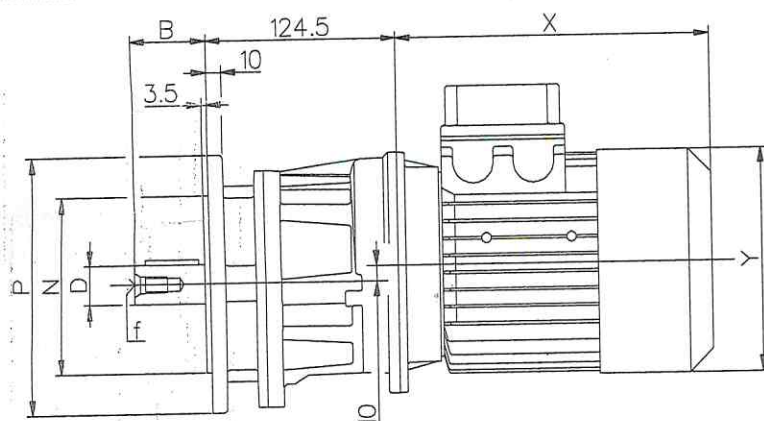

 


Alberi / Shaft / Wellen / Arbres / Ejes				
D j6	B	b	t	f
25	50	8	28	M10
(19)	(40)	(6)	(21,5)	(M6)

Flange / Flanges / Flansche / Flanges / Bidas			
P	M	N f8	O
160	130	110	9
(140)	(115)	(95)	(9)

A42	Motore normale / Standard motor / Normaler Motor / Moteur normal / Motor normal					Motore autofrenante / Brake motor / Bremsmotor / Moteur frein / Motor-freno				
	g1	g2	X	Y	~ kg	g1	g2	X	Y	~ kg
063	188,7	108,7	178	120,9	8,4	188,7	108,7	237,5	120,9	9,7
071	200,5	120,5	204	138,9	10,3	200,5	120,5	269	138,9	12,2
080	102,5	131,5	221	157,9	14,3	102,5	131,5	294	157,9	17,4
090s	219,5	139,5	235	172,9	16,2	219,5	139,5	313	172,9	21,1
090I	219,5	139,5	255,5	172,9	18,7	219,5	139,5	333,5	172,9	23,6

(..) Solo su richiesta
(..) Only on request
(..) Auf Wunsch
(..) Seulement sur demande
(..) Sólo bajo pedido

- Peso comprensivo di motore
- Weight with motor
- Gewicht mit Motor
- Poids avec moteur
- Peso con motor

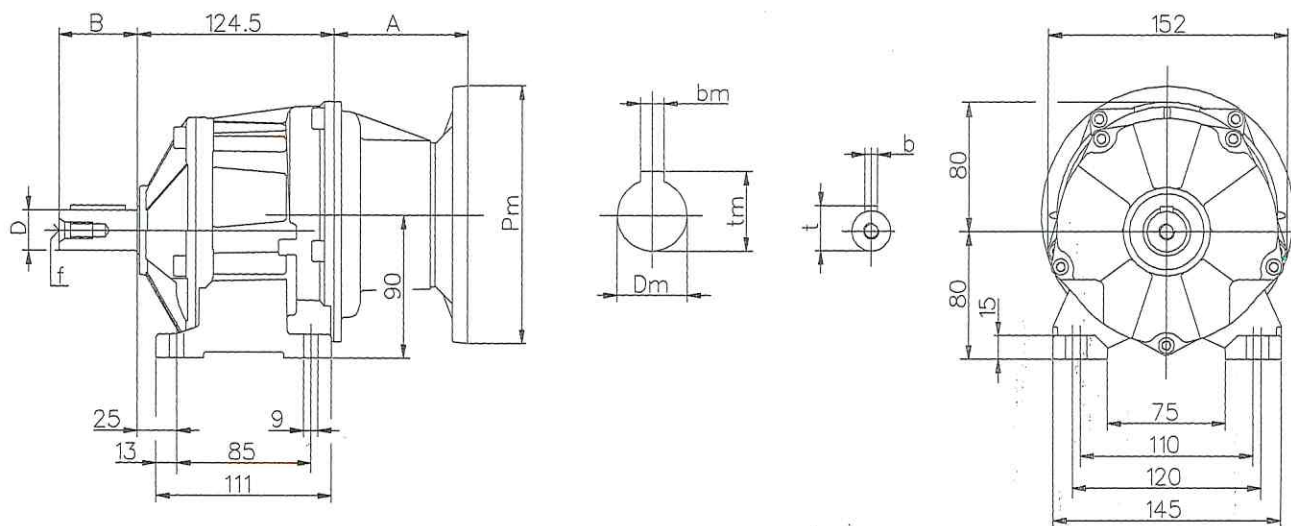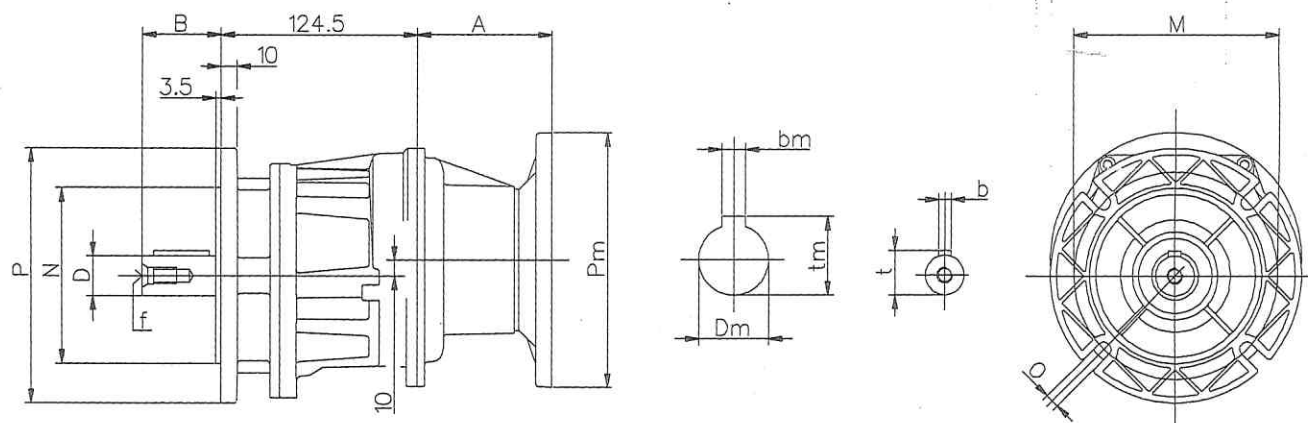
H

H..F


Alberi / Shaft / Wellen / Arbres / Ejes				
D j6	B	b	t	f
25	50	8	28	M10
(19)	(40)	(6)	(21,5)	(M6)

Flange / Flanges / Flansche / Flasques / Bidas			
P	M	N f8	O
160	130	110	9
(140)	(115)	(95)	(9)

PAM	A	kg
063	55	5.8
071	55	5.9
080 - 090	86	6.1

- Peso senza motore
- Weight without motor
- Gewicht ohne Motor
- Poids sans moteur
- Peso sin motor

- (..) Solo su richiesta
- (..) Only on request
- (..) Auf Wunsch
- (..) Seulement sur demande
- (..) Sólo bajo pedido

Per le dimensioni relative alla zona attacco motore (Pm, Dm, bm, tm) fare riferimento alla tabella di pag. 134.
 For the dimensions concerning the motor connection area (Pm, Dm, bm, tm) please refer to the table shown at page 134.
 Zu den Abmessungen des Motoranschlußflansches (Pm, Dm, bm, tm) siehe Tabelle auf Seite 134.
 Pour les dimensions concernant la zone de montage du moteur (Pm, Dm, bm, tm) lire SVP le tableau à la page 134.
 Para las magnitudes correspondientes a la zona del motor (Pm, Dm, bm, tm) consulte la tabla de la página 134.