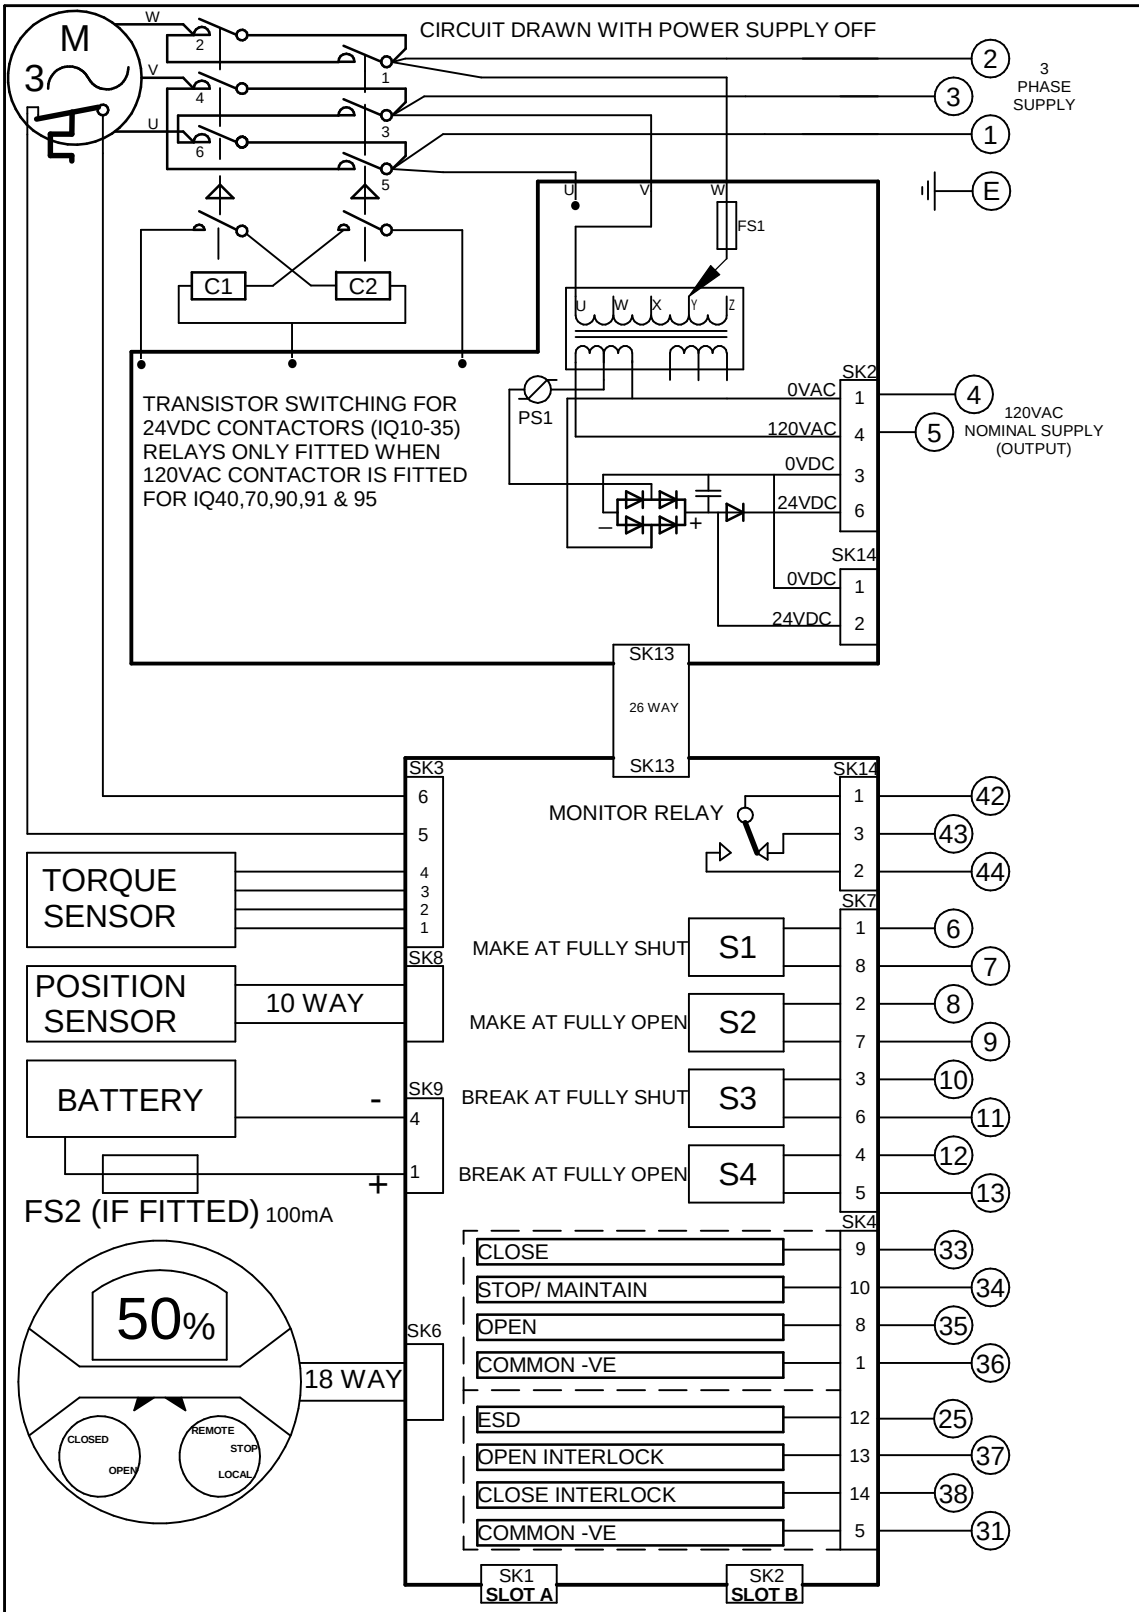


FOR TYPICAL REMOTE CONTROL DETAILS, SEE DOCUMENT
RWS101

TRANSFORMER TAPPING OPTIONS	
Tap	Nominal 50/60Hz
TYPE 1	
W	220/230
X	380/400
Y	400,415/420
Z	440/460
FUSE FS1=250mA ANTI-SURGE	
TYPE 2	
W	346/380
X	480/500
Y	240/240
Z	550/575
FUSE FS1=250mA ANTI-SURGE	
TYPE 3	
X	660/660-690
Y	690/-
FUSE FS1=150mA ANTI-SURGE	

REFER TO SHEET 2 FOR NOTES
& OPTION PCB'S IF FITTED

Iss	Date	Chkd	Revision Details
5	090113	PMJ	Re-track of the 24V DC pin on SK14 to behind the diode.
6	170413	JHW	RWS WAS 100
7	180614	MR	400v added to type 1 tapping Y. Note added to sheet 2 note 1.

www.rotork.com

ROTORK CONTROLS LTD
BATH, BA1 3JQ
ENGLAND
Tel:01225-733200

ROTORK CONTROLS INC
ROCHESTER
NY 14624, USA
Tel:585-247-2304

IQ + 120VAC REMOTE CONTROL SUPPLY.

Drawn by: PMJ
Date : 160512
Base WD: 110B0000
Job No : - -
MI No : - -

Circuit Diagram Number
110B0000
B1 C1 B2 C2

Issue No
7

Sheet
1
of 2

NO OPTIONS FITTED

NOTES

1.FUSES:
-PS1 is a self-resetting fuse.
-Refer to publication PUB002-039 for approved fuses FS1 and FS2.
-Actuator rated voltage specified on nameplate. Voltage tolerance +/-10%, applies for rated torque performance; duty cycle is not guaranteed.

2.REMOTE CONTROL:
-For typical remote control circuits refer to:
  -RWS indicated or PUB002-041.
-For DC and AC control, connect –ve/0V to terminal 36.
-(For negative switch / positive common, refer to RWS indicated).
-Control signal threshold voltages:
  -DC: “on” ≥16Vdc / “off” ≤8Vdc, max 60Vdc.
  -AC: “on” ≥60Vac / “off” ≤40Vac, max 120Vac.
-Control signal duration to be 300ms minimum.
-Maximum current drawn from remote control signals is:
  -8mA at 24Vdc or 12mA at 120Vac.
-Supply provided on terminals 4 & 5:
  -Intended for remote control.
  -Max external load 5W at 24Vdc / 5VA at 120Vac

3.INDICATION:
-For typical position, status and alarm indication see PUB002-041.
-“S” contacts are user configurable and are shown in their default setting.
-Refer to PUB002-040 for functions and configuration instructions.
-Monitor Relay indicates actuator availability for remote control (shown “unavailable”). It can be configured to exclude local/remote selection.
-Refer to PUB002-040 for monitored functions and configuration instructions.
-Voltage applied to indication contacts must not exceed 150Vac
-Individual Switch current must not exceed 3.5A inductive, 5A resistive and no more than 8A in total for all 4 contacts.

4.BATTERY:
-Battery maintains local and remote “S” contact indication only.
-Refer to installation manual for approved replacement battery types.

See Sheet 1 for all Revision details/information

Circuit Diagram Number	Issue No	Sheet
110B0000	7	2 of 2