


8.3 Sezione del soffiatore

8.3 Blower section

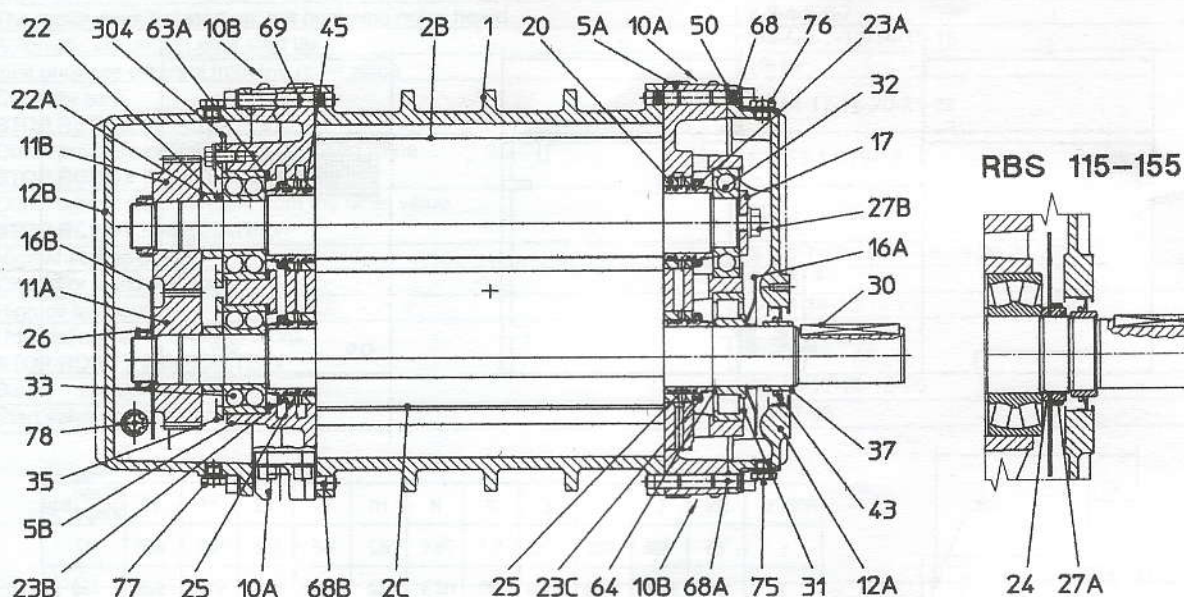

POS.	DENOMINAZIONE	N° PEZZI
1	Corpo	1
2B-2C	Albero+Rotore	2
5A-5B	Fianco	2
10A	Piede DX	2
10B	Piede SX	2
11A	Ingranaggio conduttore	1
11B	Ingranaggio condotto	1
12A-12B	Carter	2
16A-16B	Disco di lubrificazione	2
17	Disco bloccaggio cuscinetto	1
20	Camera di tenuta	4
22	Distanziale ingranaggio (solo RBS 35-155)	2
23A	Disco paraolio	1
23B	Disco paraolio	2
23C	Disco paraolio	1
24	Distanziale disco lubrif. (solo RBS 115-155)	1
25	Distanziale di tenuta (solo RBS 35-155)	4
26	Ghiera	2
27A	Ghiera (solo RBS 115-155)	1
27B	Vite bloccaggio cuscinetto	1
30	Linguetta	1
31	Cuscinetto	1
32	Cuscinetto	1
33	Cuscinetto	2
35	Coperchio cuscinetto	2
37	Anello JR	1
43	Anello di tenuta	1
45	Segmento (solo RBS 35-155)	16
50	Guarnizione	2
63A	Anello di compensazione	6
64	Anello di compensazione	1
68	Spina di centratura (solo RBS 75-106)	2
68A	Spina di centratura (RBS 35-66 N°4)	2
68B	Spina di centratura (RBS 35-66 N°2)	1
69	Spina di centratura (solo RBS 75-106)	1
75	Tappo scarico olio (solo RBS 35-66)	1
76	Tappo carico olio	2
77	Tappo scarico olio (RBS 35-66 N°3)	4
78	Tappo livello olio	4
304	Piastrina di regolazione	4

PART. N.	PART DESCRIPTION	No OF PARTS
1	Casing	1
2B-2C	Shaft+Rotor	2
5A-5B	Cover	2
10A	Right foot	2
10B	Left foot	2
11A	Driving gear	1
11B	Driven gear	1
12A-12B	Sump	2
16A-16B	Lubricating disc	2
17	Bearing lock disc	1
20	Sealing chamber	4
22	Gear spacer (only RBS 35-155)	2
23A	Oil splash disc	1
23B	Oil splash disc	2
23C	Oil splash disc	1
24	Disc spacer (only RBS 115-155)	1
25	Sealing spacer (only RBS 35-155)	4
26	Gear locking nut	2
27A	Gear locking nut (only RBS 115-155)	1
27B	Bearing locking screw	1
30	Key	1
31	Rolling bearing	1
32	Rolling bearing	1
33	Rolling bearing	2
35	Bearing cover	2
37	Shaft sleeve	1
43	Seal ring	1
45	Flexible piston ring (only RBS 35-155)	16
50	Gasket	2
63A	Compensating ring	6
64	Compensating ring	1
68	Centering pin (only RBS 75-106)	2
68A	Centering pin (RBS 35-66 No 4)	2
68B	Centering pin (RBS 35-66 No 2)	1
69	Centering pin (only RBS 75-106)	1
75	Oil draining plug (only RBS 35-66)	1
76	Oil filling plug	2
77	Oil draining plug (RBS 35-66 No 3)	4
78	Oil level plug	4
304	Adjustment plate	4