

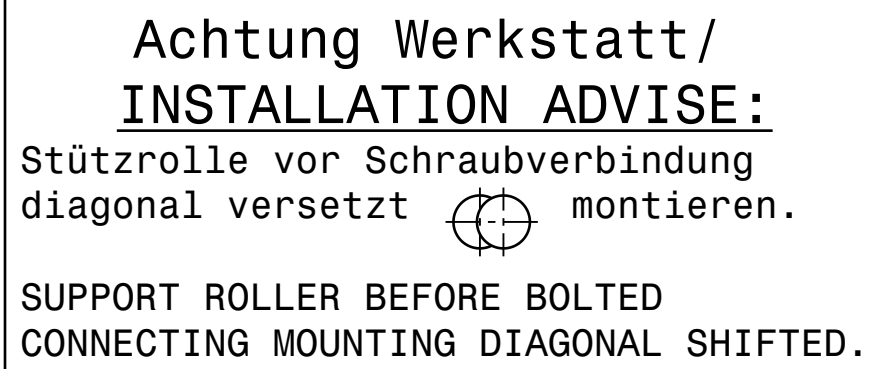





Achtung / ATTENTION
Bei Einsatz auf Laufprofil:
WHEN APPLIED TO TRACK PROFILE
INP 140 - INP 200
IPE 140 - IPE 200
Verwendung nur mit Stützrollen!
USE WITH SUPPORT ROLLERS

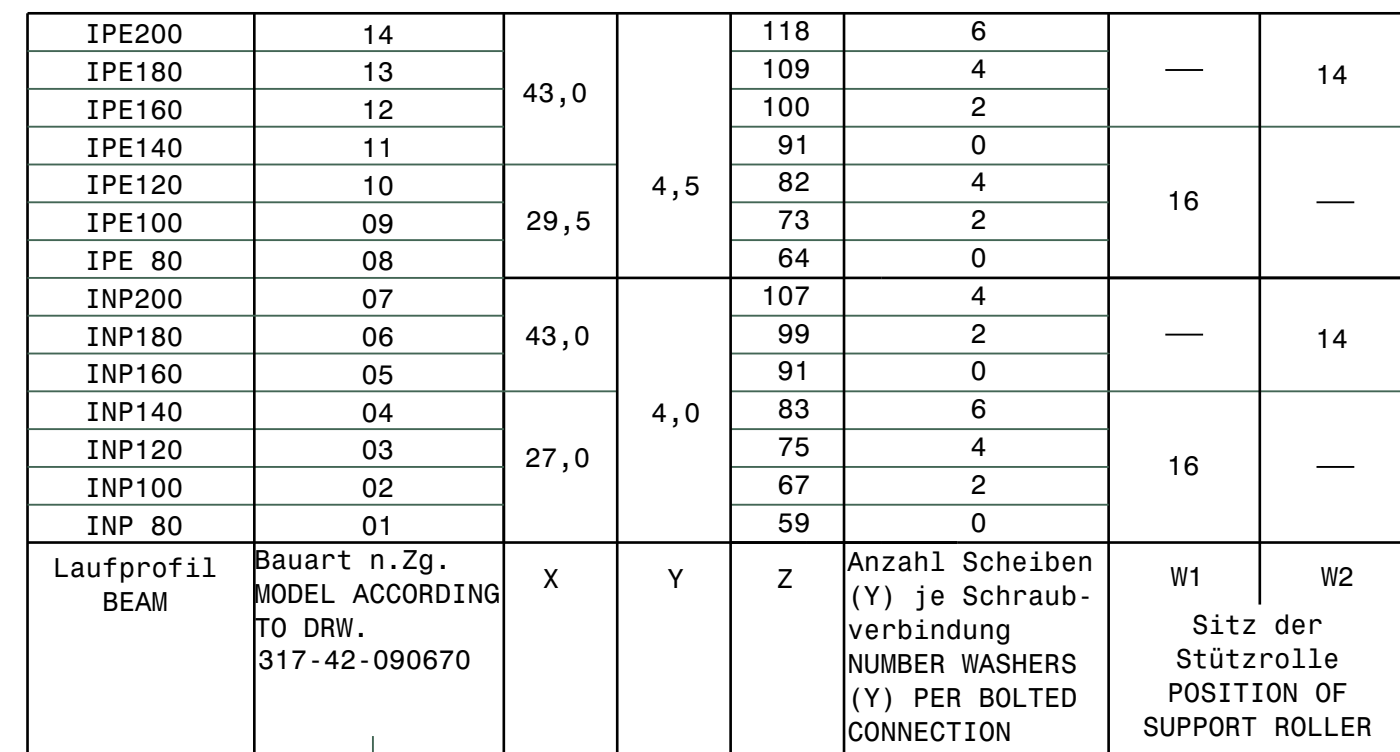

Ident-Nr. 0 3 X X /00-

Beispiel/EXAMPLE:
Ident-Nr.0348695/00-03
W 45 FR/250-100-B175 mit Stützrollen
Laufprofil INP120

24	64	W	45	FR/325-230-B225	325	230	225	100	238	245	195	...	...	...	349	204
23	63	W	45	FR/325-230-B175			175				145	349	742		349	430
22	62	W	45	FR/325-170-B225	325	170	225	120	238	245	195	348	684		348	706
21	61	W	45	FR/325-170-B175			175				145	348	683		348	705
20	60	W	45	FR/290-170-B225		170	225	100			195	348	682		348	704
19	59	W	45	FR/290-170-B175			175				145	348	681		348	703
18	58	W	45	FR/290-140-B225	290	140	225	120	203	210	195	348	680		348	702
17	57	W	45	FR/290-140-B175			175				145	348	679		348	701
16	56	W	45	FR/250-170-B225		170	225	100			195	348	678		348	700
15	55	W	45	FR/250-170-B175			175				145	348	677		348	699
14	54	W	45	FR/250-140-B225		250	225	100	163	170	195	348	676		348	698
13	53	W	45	FR/250-140-B175		140	175				145	348	675		348	697
12	52	W	45	FR/250-100-B225			225	120			195	348	674		348	696
11	51	W	45	FR/250-100-B175		100	175				145	348	673		348	695
10	50	W	45	FR/200-140-B225		140	225	70			195	348	672		348	694
09	49	W	45	FR/200-140-B175			175				145	348	671		348	693
08	48	W	45	FR/200-100-B225	200	100	225	100	113	120	195	348	670		348	692
07	47	W	45	FR/200-100-B175			175				145	348	669		348	691
06	46	W	45	FR/200-80-B225		80	225	100			195	348	668		348	690
05	45	W	45	FR/200-80-B175			175				145	348	667		348	689
04	44	W	45	FR/160-100-B225		100	225	70			195	348	666		348	688
03	43	W	45	FR/160-100-B175			175				145	348	665		348	687
02	42	W	45	FR/160-80-B225		80	225	100			195	348	664		348	686
01	41	W	45	FR/160-80-B175	160		175				145	348	663		348	685

[illegible][illegible]