Mercotac Rotary Electrical Connectors - Model 235

Model 235 Two Conductors, 2@30amps & 500V

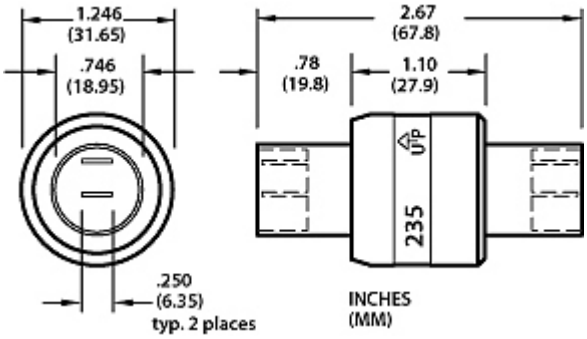

Disconnects included (4 lg.)
Boot Kit available
Available with stainless steel ball bearing (235-SS)

Model 235 Accessories

57235
Boot Kit for dust or splash protection IP51

55250
Terminal 16 - 14 AWG
(qty. 2 included)

55251
Terminal 16 - 14 AWG
(qty. 2 included)

Terminals for other wire gauges available.
(22-18 AWG and 12-10 AWG)

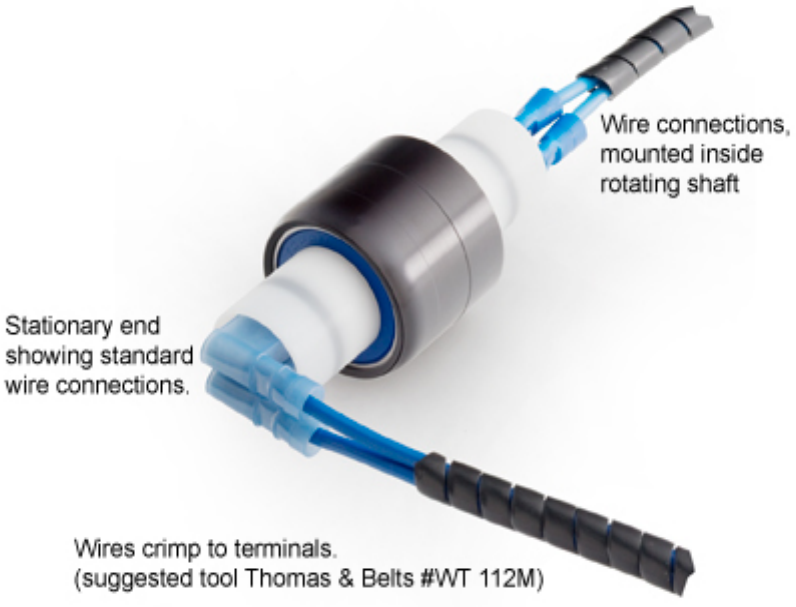

Model 235 Suggested Mounting Methods

Model 235 is typically mounted by either the black body or the white plastic bushing on either end using a set screw. When mounting horizontally, mount the Mercotac so the body of the connector rotates.

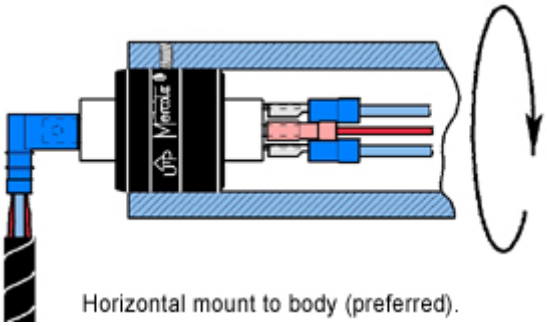

Horizontal mount to body (preferred).

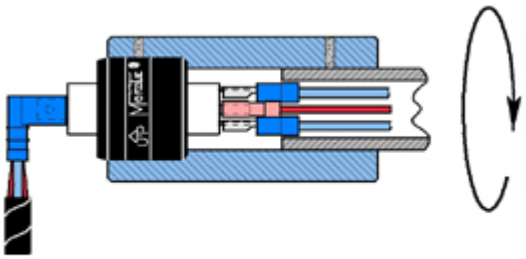

Adaptor mount (when shaft diameter is smaller than body of Mercotac).

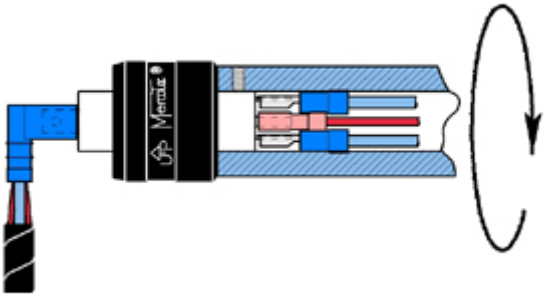

Horizontal mount to bushing (not preferred)
(May be used if shaft cannot be fitted to body diameter).

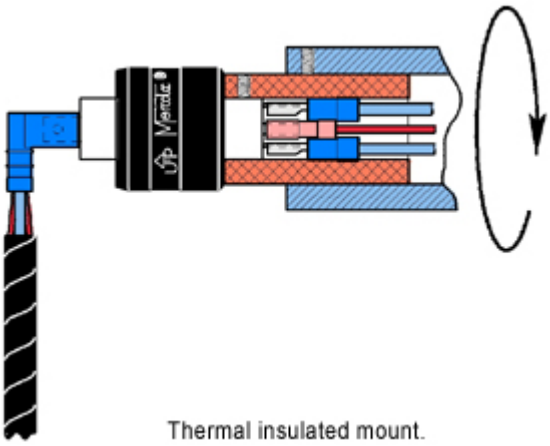

Thermal insulated mount.

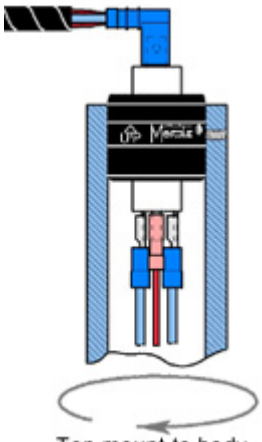

Top mount to body.

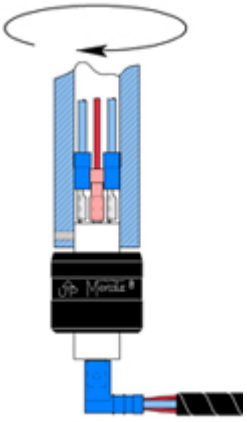

Bottom mount.

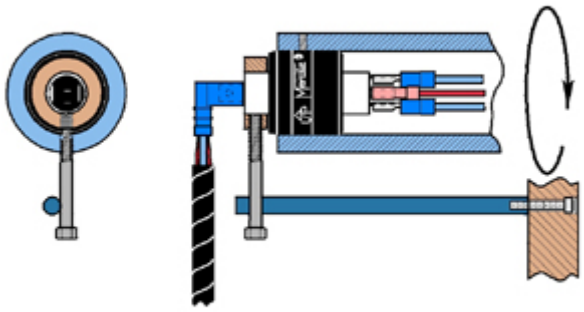

Floating torque arm mount.

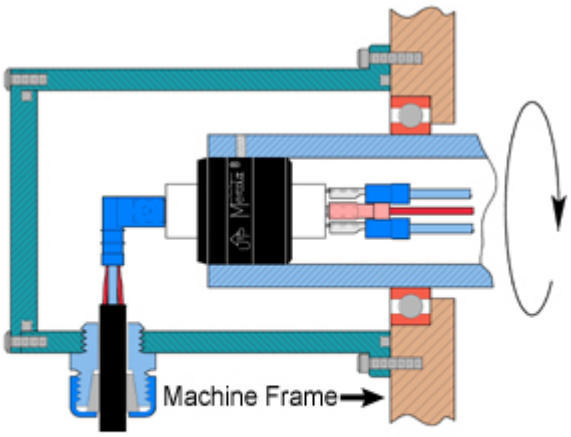

Protective housing mount
(Recommended for wash-down or dirty environments.
Also recommended for food processing applications).

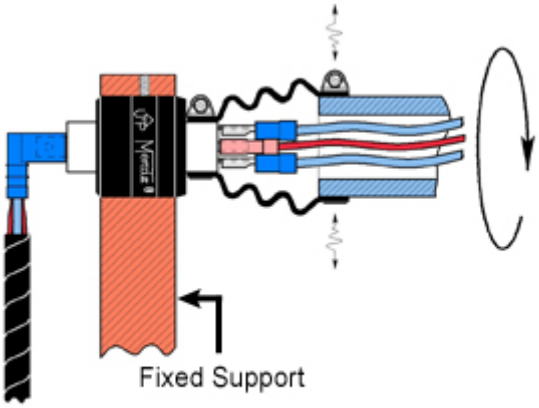

Vibration isolating mount with flexible bellows.

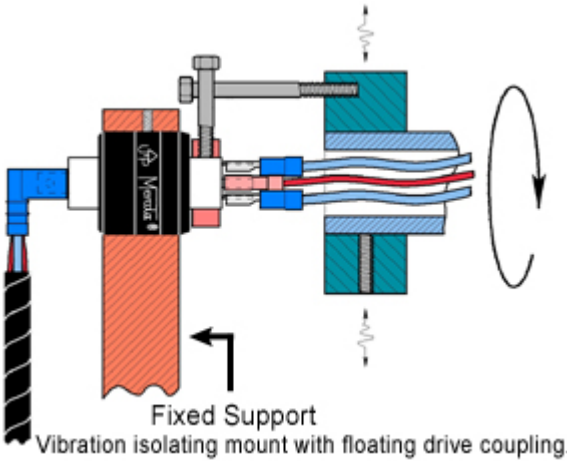

Vibration isolating mount with floating drive coupling.

Installation Notes:

- The up arrow should not point below horizontal
- Do not solder to or bend connector tabs
- Avoid lateral forces and mechanical loads (overly stiff or tight wires)
- Do not rigid mount both ends of connector
- Limit mounting eccentricity (runout / wobble) to .005" (.13mm)
- Provide overload protection within the circuit
- Avoid vibration and bumping motions